


WD-202, 2029 & EBN CUSTOMER DISPLAY

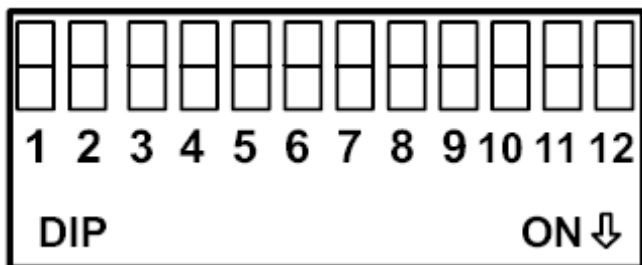

SW1	SW2	SW3	Command type
ON	ON	ON	DSP800
OFF	ON	ON	ESC/pos
ON	OFF	ON	ADM 787
OFF	OFF	ON	ADM 788
ON	ON	OFF	EMAX(Aedex)
OFF	ON	OFF	UTC/P
ON	OFF	OFF	UTC/S
OFF	OFF	OFF	CD5220

5.2 Baud rate selection

SW8	SW9	Baud rate (bps)
OFF	ON	9600

5.3 Parity check selection

SW10	Parrity & data bits
ON	None-parity , 8 data bits

5.4 International character set selection

SW4	SW5	SW6	SW7	Character set	Code table (80H-FFH)
ON	ON	ON	ON	U.S.A.	PC-437(USA&Europe)

5.5 Self-test & demo function selection

SW11	Function
ON	Enable
OFF	Disable

Table 5-5

* SW12 reseve

Default Dipswitch Settings 1,2,3-OFF,4,5,6,7-ON,8-OFF,9,10-ON,11,12-OFF

If you are using the Customer Display USB please set the switch no 8, 9 OFF

Document Created By Emsys Information Technology LLC